

Dear Customer,

May we take this opportunity to thank you for purchasing your SAMS SOUTHERN HIGHLANDS intruder alarm system.

This Quick Reference guide is designed to assist with operations of your SAMS SOUTHERN HIGHLANDS system. We suggest that you keep it handy to the codepad.

We strongly recommend that you test your intruder alarm system regularly.

* Arm the system – leave the building – wait 2 minutes then enter and walk through the building. The siren should sound and the zones that are triggered will be flashing – Disarm the system.

Before calling for service, check the following:

- Leaving windows and doors open or ajar when the system is armed will cause the alarm to activate.
- Red power led will flash for battery trouble and extinguish for mains power fault. If Power Led is not on – check the power pack that plugs into the power point.
- When arming the system without the AC mains power on or with a zone isolated will cause the codepad to beep. This beeping is only a warning and will stop after 1 minute.
- If the alarm has activated whilst absent – Disarm the system then check “ALARM MEMORY “ (see other side).
* The intruder detectors installed are designed to go up to 15m, therefore they are sensitive up close. Spray “Baygon Surface Spray” around all intruder detectors regularly to keep bugs away.
- The system has a one minute exit time on all zones. Entry time is only on zones crossed entering the premises.

SAMS SOUTHERN HIGHLANDS

Electronic Security Since 1986.

Control Room 48617000 (24 hours)

Admin. 48617000 (Business Hours)

reception@sams.com.au

SAMS SOUTHERN HIGHLANDS Quick Reference Guide - Model NX8

To ARM –

- Check all windows and doors are closed.
- Press a valid CODE into the codepad.

The red ARMED led will come on and the codepad will beep for 1 minute. System is On.

To DISARM –

- Enter the premises via the normal entry path. (codepad will start to beep)
- Press a valid code number into the codepad.

The red Armed led will turn off and the codepad will stop beeping. System is Off.

To Isolate zones – If you wish to Isolate or Bypass one or more zones, the system must be in the disarmed state. Press the “Bypass” button followed by the 2 digit zone number to be isolated, followed by “Bypass” button – Then Arm the system.

Eg. To isolate zones 4 and 5.
“Bypass 04 05 Bypass “ Then arm system

Alarm memory

Press * 3
The last zone to trigger the alarm will flash

Panic Button -

Hold down the blue button next to the star for five seconds. sirens will sound – To stop press a valid code number.

Reset system & smoke detectors:

Press * 7

Change Code Number.

The system can have up to 8 individual code numbers. The 1st code is the master code and is the only code that can change code numbers. The factory default is 1-2-3-4.

To change the master code:

* 5 Old Code 01 New Code *

To change / add additional codes:

* 5 Master Code 02 New Code *

Where underlined press 03 for user 3, 04 for user 4 etc.